

X88	AC connector
K17	AC relay
Y99-II	Additional idle air control (IAC) valve
G1	Alternator
B121	Barometric pressure (BARO) sensor
31	Battery -
30	Battery +
B132	Camshaft position (CMP) sensor
S57	Closed throttle position (CTP) switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
K12	Engine coolant blower motor relay
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
B150	Engine speed fluctuation sensor
Y104	Evaporative emission (EVAP) canister purge valve
Y28	Exhaust gas recirculation (EGR) valve
M12	Fuel pump
X63	Fuel pump diagnostic link
K20	Fuel pump relay
F	Fuse
B72	Heated oxygen sensor (HO2S)
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
50	Ignition switch - start signal
X56	Ignition timing adjustment connector
A162	Immobilizer control module
Y3	Injector
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
S259	Park/neutral position (PNP) switch
S231	Power steering pressure (PSP) switch
K46	Relay module - Carisma 1996-97
X87	Tachometer diagnostic link
B147	Throttle position (TP) sensor
A57	Transmission control module (TCM)
B33	Vehicle speed sensor (VSS)
B148	Volume air flow (VAF) sensor

81 80 79 78 77 76 75 74 73 72 71	56 55 54 53 52 51	38 37 36 35 34 33 32 31	13 12 11 10 9 8 7 6 5 4 3 2 1
92 91 90 89 88 87 86 85 84 83 82	62 61 60 59 58 57	46 45 44 43 42 41 40 39	26 25 24 23 22 21 20 19 18 17 16 15 14

JD43290

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

